

User manual

To use this screen a laptop is needed.

Tip:

If you temporarily need a laptop, you can borrow one at the service Desk (Rengerslaan 10) or the I-shop (Rengerslaan 8).

Turning on the screen

Press the button  at the bottom center of the Screen. The color of the button will change from red to light blue .

Connecting a laptop to the screen

Use the available HDMI and USB (for touchscreen function) cables to connect your laptop to the Screen.



These two cables are needed to share your laptop screen with that of the ProWise board and to use the touchscreen functionality of the screen.

In the event of a malfunction before or during a lecture, call the emergency number: 06 83286243

Need more explanation on how to use the screen? Then book a digicoach via the service square. You can do this by mail: servicedesk@nhlstenden.com or telephone: 058-2512552